

DP-250PLUS

SAMICK DIGITAL PIANO

Quick Guide

전원공급 및 주의사항

사용상의 안전을 위하여 본 사용설명서에 기록된 경고 및 주의사항을 반드시 읽어보시고 숙지하여 주시기 바랍니다.

⚠️ 전원공급

- 본 제품은 15V, 1.5A 전용으로 사용하여야 합니다.

⚠️ 경고사항

전기적 충격, 단락, 손상, 화재 등으로 인한 신체 상해나 사망의 위험성을 피하기 위해 아래의 기본 주의 사항을 항상 따르십시오. 본 경고 사항에는 다음 내용이 포함됩니다.

- 1) 화재 및 감전의 위험이 있으니 제품을 비나 습기가 많은 곳에 방치하지 마십시오.
- 2) 전원은 반드시 제품에 표시된 정격 전압을 사용해 주십시오.
- 3) 다른 전원이 공급되는 곳에서 사용될 때는 삼익악기의 판매원에게 자문을 구한 뒤 적합한 변압기나 변류기를 사용하십시오.
- 4) 퓨즈를 교환할 때는 반드시 정격 퓨즈를 사용하십시오.

⚠️ 사용할 때의 주의점

- 1) 강한 충격은 고장의 원인이 되므로 심한 충격은 피하십시오.
- 2) 운반시에는 특히 건반 및 스위치 부분을 주의해 주십시오.
- 3) 주 음량은 기본값으로 설정되었으며, 전원을 켜 뒤 단계적으로 조작하여 사용하십시오.
- 4) 본체를 열지 마십시오. 본 피아노는 정밀 부품으로 구성되어 있으므로, 불필요하게 손을 댈 경우 고장이나 사고의 원인이 될 수 있습니다.
- 5) 사용 후에는 전원을 끄십시오.
- 6) 장시간 사용하지 않을 때는 가능하면 플러그를 뽑은 상태로 보관하십시오.

설치 장소 및 보관상의 주의점




사용상의 안전을 위하여 본 사용설명서에 기록된 경고 및 주의사항을 반드시 읽어보시고 숙지하여 주시기 바랍니다.

- 직사광선이 닿는 곳은 피해 주십시오.
- 급격한 온도변화가 있는 곳은 피해 주십시오.
- 먼지가 많은 곳은 피해 주십시오.
- 난방이나 조리기구와 같이 그늘음과 열이 발생할 수 있는 곳은 피해주십시오.
- 피아노 위에 화병이나 물컵, 커피잔 등 물기가 있는 물건들을 올려놓지 마십시오. 감전 및 치명적인 고장을 일으킬 수 있습니다.
- 피아노 내부에 금속이나 이물질이 들어가지 않도록 해주십시오. 잡음의 원인이 될 수 있으며, 건반의 원활한 동작에 악영향을 줄 수 있습니다.
- 감전의 위험이 있으므로 소비자가 직접 피아노를 분해하거나 해체하지 마십시오.
- 수리가 필요하다고 생각하실 때는 본사 서비스센터로 연락하십시오.
- 피아노 외장도 건반은 부드러운 형질로 살며시 닦아 주십시오. 알콜이나 벤젠, 아세톤 등 화학제품은 절대 사용하지 마십시오.

목 차

· 제품 설치 안내 Product Setting Guide	04
· 제품의 주요 특징 Main Feature	05
· 주요기능 조작 방법 Quick Guide	07
· 연주곡 리스트 Demo song/Rhythm List	09
· 제품 사양 Product Specification	14
· 제품 보증서 Product Warranty	15

제품 설치 안내

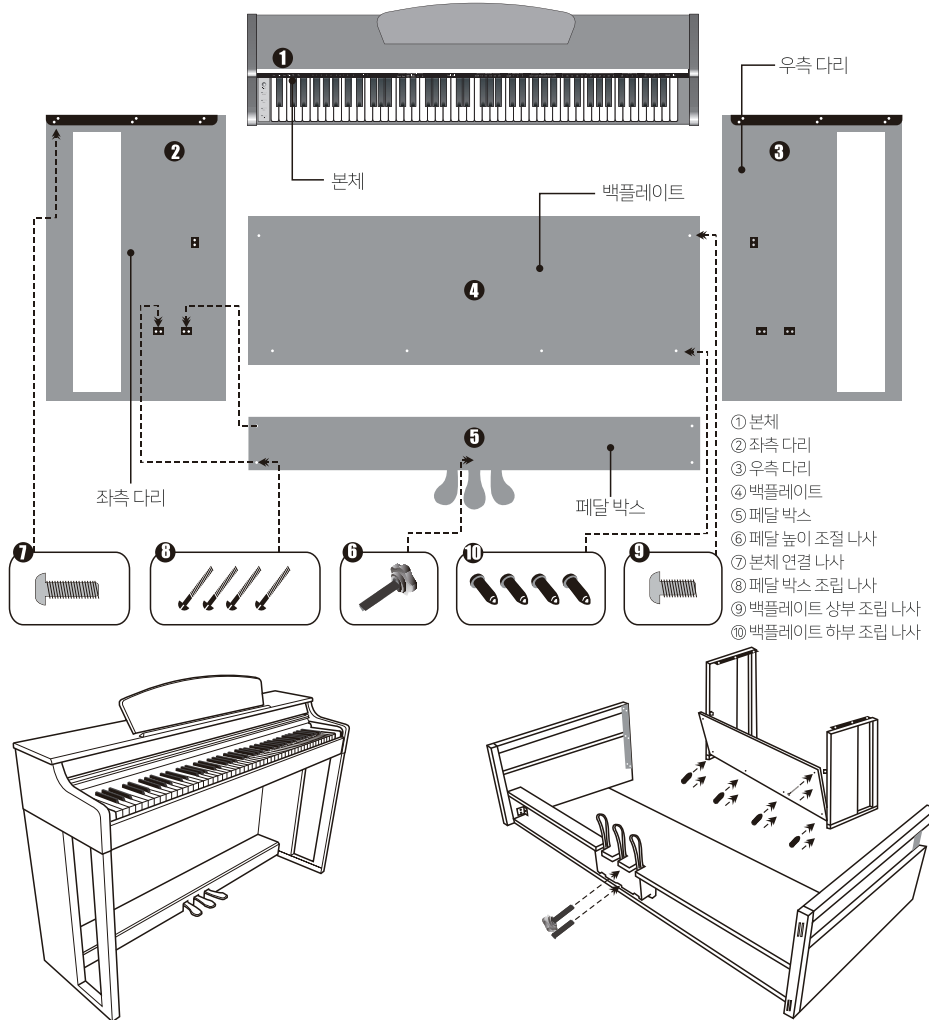

CAUTION 전원 공급장치 전압이 너무 높거나 너무 낮으면 전자 피아노가 손상 될 수 있으니, 전압이 220V 인지 확인 하시고 연결 하시기 바랍니다.

1. 하체 조립 - 좌우 옆판, 페달박스, 하판

* 페달 케이블은 하체와 본체의 조립이 끝난 후 고정하여 주십시오.

- 1) 페달 박스와 옆판을 고정 시킨 후에 볼트로 좌,우를 조입니다.
- 2) 페달 박스 안쪽에 있는 페달 케이블을 밖으로 꺼내 놓습니다.

2. 하체와 본체(키보드) 조립

- 1) 본체(키보드)를 조립된 하체 위에 올려 놓습니다.
- 2) 볼트로 좌, 우 옆판과 본체를 단단히 고정합니다.

3. 페달 케이블 단자 연결


- 1) 조립이 완료된 상태에서 케이블을 본체의 하단에 있는 페달잭 연결부에 연결합니다.

제품의 주요 특징


삼익악기 디지털피아노를 선택하여 주셔서 대단히 감사합니다.

- ▶ 어쿠스틱 피아노와 동일한 해머액션 건반의 터치감 (SHA-1 건반)
- ▶ SGSE V2(Seiler Grand Sound Engine Ver.2) 음원 탑재
- ▶ 최대 동시 발음 수 256
- ▶ 음색혼합 / 건반분리 / 조옮김 / 메트로놈 / USB TO MIDI
- ▶ 음색 : 1,000개 음색
- ▶ 리듬 : 200개 자동반주 리듬
- ▶ MIDI / AUDIO IN,OUT / USB / HEADPHONE 제품 하단 2ea <뒷판넬 Headphone 외부사운드 출력됨>
- ▶ 오디오 와이어리스 장착

외부 연결 단자

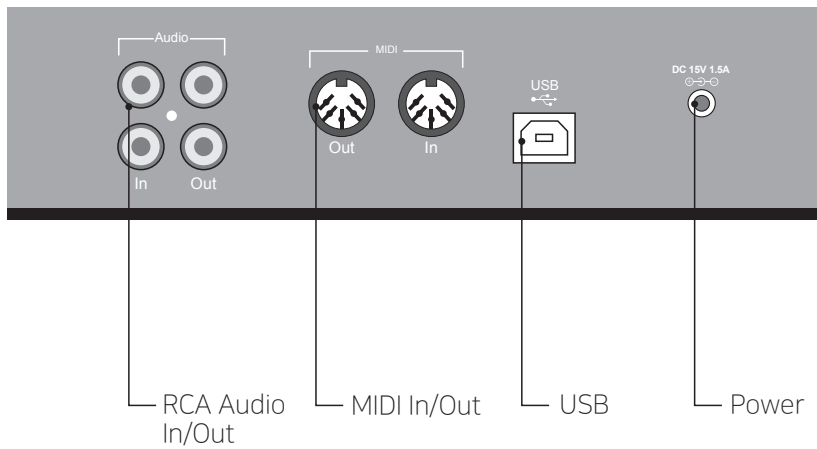



헤드폰 연결 단자

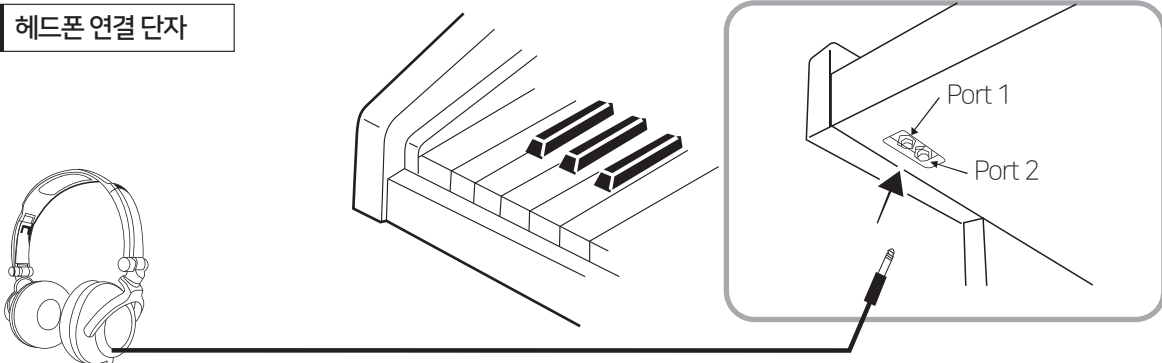

제품의 주요 특징

페달박스 연결

어쿠스틱 그랜드 피아노와 동일하게 서스테인 페달, 소스테누토 페달, 소프트 페달로 구성되었습니다.
제품 조립 시 페달 코드를 피아노 본체에 연결하여 주시기 바랍니다.

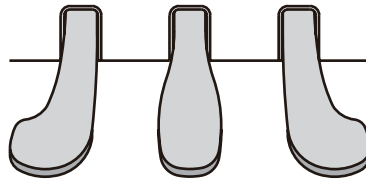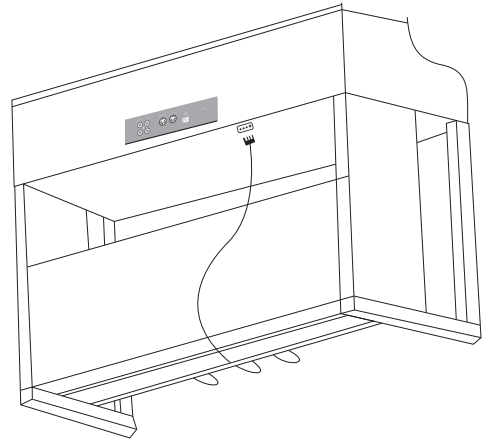

소프트 페달

소프트 페달은 음량을 조절할 수 있습니다. 페달을 밟고 연주하면 음이 부드러워지며 음량이 감소합니다.

소스테누토 페달

소스테누토 페달을 밟은 상태에서 특정음 혹은 화음을 누르면, 해당 음은 페달을 누르고 있는 동안 지속되지만, 페달을 밟은 이후에 누른 음들은 지속되지 않습니다.

서스테인 페달

서스테인 페달을 밟은 상태에서 연주하면, 실제 어쿠스틱 피아노와 동일하게 연주하는 음들이 지속되는 효과가 나타납니다.

주요 기능 조작 방법

음색 및 리듬 선택

좌측 패널의 Voice / Rhythm 버튼을 짧게 눌러 음색모드 / 리듬모드로 전환할 수 있습니다.

- 음색모드 : Voice / Rhythm 버튼에 불빛이 점등됩니다.

- 리듬모드 : Voice / Rhythm 버튼에 불빛이 점멸 상태가 됩니다.

- 1) 음색 및 리듬 변경 : 해당 모드에서 좌측패널의 ▲▼ 버튼을 눌러 음색을 변경합니다.
 - 빠른 음색 변경 : 좌측 패널의 하단 6개의 버튼을 눌러 주요 음색을 변경할 수 있습니다.
- 2) 리듬 재생 및 정지 : Start / SYNS 버튼을 짧게 누르면 리듬을 재생하거나 중지할 수 있습니다.
- 3) 리듬 대기모드 : Start / SYNS 버튼을 길게 누르면 리듬 대기모드가 되며, 이 상태에서 건반을 누르면 리듬이 연주와 함께 동시에 재생됩니다.
- 4) 코드 : Chord 버튼을 누른 후 왼쪽 건반을 누르면 코드연주를 할 수 있으며, 리듬이 재생될 때 Chord 버튼을 활성화 하여 왼쪽 건반을 누르면 자동반주를 연주할 수 있습니다.
- 5) Intro / End : 리듬 설정 후 Intro를 누르면 해당 리듬의 Intro의 연주 후 리듬 재생을 할 수 있습니다. 또한, 리듬이 재생될 때 End를 누르면 리듬의 엔딩이 나오면서 리듬을 종료할 수 있습니다.
- 6) Fill 1, 2 : 리듬이 재생되는 동안 좌측 패널의 Fill 1, 2 버튼을 눌러 리듬 효과를 적용할 수 있습니다.

메뉴 버튼을 활용한 기능 사용

좌측 패널의 Menu 버튼을 차례로 누르면 아래의 기능을 사용할 수 있으며, 해당 모드에서 좌측 패널의 ▲▼ 버튼을 눌러 각 기능을 조절할 수 있습니다.

- 1) Transpose : 디지털피아노의 전조를 조절합니다.
- 2) Touch : 터치감도를 조절합니다.
- 3) Dual : 두가지 음색을 혼합하는 음색혼합 기능이며 001로 변경시 Dual모드가 활성화 된 상태이며, 활성화 상태에서 Voice / Rhythm을 누르면 2번째 음색이 표시창에 표기되며 ▲▼을 활용하여 두번째 음색을 변경할 수 있습니다.
- 4) Balance : Dual 기능 음색혼합 사용 시 두 번째 음색의 볼륨을 조절합니다.
- 5) Split : 건반분리 기능이며 001로 변경시 Split 모드가 활성화 된 상태이며 활성화 상태에서 Voice/Rhythm을 누르면 좌측건반 음색이 표시창에 표기되며 ▲▼을 활용하여 좌측건반 음색을 변경할 수 있습니다.
- 6) Split Note : 건반분리 기능의 분리점을 조절합니다. Split Note에서 분리를 할 건반을 누르거나, 좌측 패널의 ▲▼ 버튼을 눌러 조절할 수 있습니다.
- 7) Reverb Level : 8가지 리버브 타입을 선택할 수 있습니다.
- 8) Chorus Level : 8가지 리버브 타입을 선택할 수 있습니다.
- 9) Signature : 메트로놈 박자의 종류를 조절할 수 있습니다.

데모송 재생

디지털피아노에 내장된 데모곡을 들을 수 있습니다.

- 좌측 패널의 ▲▼ 버튼을 동시에 눌러 데모곡을 재생하거나 멈출 수 있습니다. 또한 ▲▼ 버튼을 눌러 다음 곡으로 조절할 수 있습니다.
-

녹음

디지털피아노에서 연주하면서 녹음을 할 수 있습니다.

- 1) 좌측 패널의 Record 버튼을 짧게 누르면 Record 버튼에 불빛이 점멸되며, 녹음 준비 상태로 들어갑니다.
건반을 누르면 자동으로 녹음이 되며, 녹음 준비 상태에서 Start / SYNS 버튼을 누르면 리듬과 함께 녹음을 할 수 있습니다.
 - 2) 종료 : 좌측 패널의 Record 버튼을 누르거나, Play / Stop 버튼을 눌러 녹음을 종료합니다.
 - 3) 재생 : 좌측 패널의 Play / Stop 버튼을 눌러 녹음한 음악을 재생하거나 멈출 수 있습니다.
-

메트로놈

- 1) 좌측 패널의 Metro / Tempo 버튼을 짧게 누르면 메트로놈 기능을 사용할 수 있습니다.
- 2) 속도 설정 : 좌측 패널의 Metro / Tempo 버튼을 길게 누르면 메트로놈 속도 조절 상태로 진입하며, ▲▼ 버튼을 눌러 메트로놈의 속도를 조절할 수 있습니다.
- 속도 설정 기능을 통해 메트로놈 뿐만 아니라 리듬, 데모곡, 녹음 등의 속도를 조절할 수 있습니다.
- 3) 박자 변경 : 좌측패널의 Menu - Signature 기능에서 ▲▼ 버튼을 눌러 1/4 부터 6/4 까지의 박자를 변경할 수 있습니다.

보이스 리스트 [Voice List]

No.	Name	No.	Name	No.	Name	No.	Name	No.	Name
000	Acoustic Grand Piano	067	Baritone Sax	134	MuYu	201	Electric Piano 20	268	Drawbar Organ 10
001	Bright Acoustic Piano	068	Oboe	135	Yang Qin	202	Electric Piano 21	269	Drawbar Organ 11
002	Electric Grand Piano	069	English Horns	136	Pi Pa	203	Electric Piano 22	270	Drawbar Organ 12
003	Honky Tonk Piano	070	Bassoon	137	Liu Qin	204	Electric Piano 23	271	Drawbar Organ 13
004	Electric Piano 1	071	Clarinet	138	Yue Qin	205	Electric Piano 24	272	Drawbar Organ 14
005	Electric Piano 2	072	Piccolo	139	Da Ruan	206	Electric Piano 25	273	Drawbar Organ 15
006	Harpsichord	073	Flute	140	Zhong Ruan	207	Electric Piano 26	274	Percussive Organ 1
007	Clavi	074	Recorder	141	Xiao Ruan	208	Electric Piano 27	275	Percussive Organ 2
008	Celesta	075	Pan Flute	142	Dobro	209	Electric Piano 28	276	Percussive Organ 3
009	Glockenspiel	076	Bottle Blow	143	San Xian	210	Electric Piano 29	277	Percussive Organ 4
010	Music Box	077	Shakuhachi	144	Xiao San Xian	211	Electric Piano 30	278	Percussive Organ 5
011	Vibraphone	078	Whistle	145	Gu Qin	212	Electric Piano 31	279	Percussive Organ 6
012	Marimba	079	Ocarina	146	Gu Zheng	213	Electric Piano 32	280	Percussive Organ 7
013	Xylophone	080	Lead-Square Wave	147	Gao Hu	214	Electric Piano 33	281	Percussive Organ 8
014	Tubular Bells	081	Lead-Sawtooth Wave	148	Er Hu	215	Electric Piano 34	282	Percussive Organ 9
015	Dulcimer	082	Lead-Calliope	149	Zhong Hu	216	Electric Piano 35	283	Rock Organ 1
016	Drawbar Organ	083	Lead-Chiff	150	Ban Hu	217	Electric Piano 36	284	Rock Organ 2
017	Percussive Organ	084	Lead-Charang	151	Jing Hu	218	Electric Piano 37	285	Rock Organ 3
018	Rock Organ	085	Lead-Voice	152	Zhui Hu	219	Harpsichord 1	286	Rock Organ 4
019	Church Organ	086	Lead-Fifths	153	Yue Hu Hi	220	Harpsichord 2	287	Rock Organ 5
020	Reed Organ	087	Lead-Bass	154	Yue Hu Low	221	Harpsichord 3	288	Rock Organ 6
021	Accordion	088	Pad-New Age	155	Er Hu Ensemble 1	222	Harpsichord 4	289	Rotary Organ 1
022	Harmonica	089	Pad-Warm	156	Er Hu Ensemble 2	223	Harpsichord 5	290	Rotary Organ 2
023	Tango Accordion	090	Pad-Polysynth	157	Zhong Hu Ensemble	224	Harpsichord 6	291	Rotary Organ 3
024	Acoustic Nylon Guitar	091	Pad-Choir	158	Jian Sheng	225	Harpsichord 7	292	Church Organ 1
025	Acoustic Steel Guitar	092	Pad-Bowed	159	Lu Sheng	226	Clavi 1	293	Church Organ 2
026	Electric Jazz Guitar	093	Pad-Metallic	160	Pai Sheng	227	Clavi 2	294	Church Organ 3
027	Electric Clean Guitar	094	Pad-Halo	161	Ba Wu	228	Clavi 3	295	Church Organ 4
028	Electric Muted Guitar	095	Pad-Sweep	162	Bang Di	229	Clavi 4	296	Church Organ 5
029	Overdriven Guitar	096	FX-Rain	163	Kun Di	230	Clavi 5	297	Church Organ 6
030	Distortion Guitar	097	FX-Soundtrack	164	Hu Lu Si	231	Clavi 6	298	Church Organ 7
031	Guitar Harmonics	098	FX-Crystal	165	Xiao	232	Celesta 1	299	Church Organ 8
032	Acoustic Bass	099	FX-Atmosphere	166	Xun	233	Celesta 2	300	Church Organ 9
033	Electric Fingered Bass	100	FX-Brightness	167	Suo Na	234	Celesta 3	301	Reed Organ 1
034	Electric Picked Bass	101	FX-Goblins	168	Acoustic Piano 1	235	Celesta 4	302	Reed Organ 2
035	Fretless Bass	102	FX-Echoes	169	Acoustic Piano 2	236	Celesta 5	303	Reed Organ 3
036	Slap Bass 1	103	FX-Sci-Fi	170	Acoustic Piano 3	237	Celesta 6	304	Reed Organ 4
037	Slap Bass 2	104	Sitar	171	Acoustic Piano 4	238	Glockenspiel	305	Reed Organ 5
038	Synth Bass 1	105	Banjo	172	Acoustic Piano 5	239	Music Box	306	Reed Organ 6
039	Synth Bass 2	106	Shamisen	173	Acoustic Piano 6	240	Vibraphone	307	Accordion 1
040	Violin	107	Koto	174	Bright Piano	241	Marimba	308	Accordion 2
041	Viola	108	Kalimba	175	Electric Grand Piano	242	Barafon	309	Accordion 3
042	Cello	109	Bagpipes	176	Honky Tonk 1	243	Xylophone 1	310	Accordion 4
043	Contrabass	110	Fiddle	177	Honky Tonk 2	244	Xylophone 2	311	Accordion 5
044	Tremolo Strings	111	Shanai	178	Honky Tonk 3	245	Xylophone 3	312	Accordion 6
045	Pizzicato Strings	112	Tinkle Bell	179	Honky Tonk 4	246	Xylophone 4	313	Accordion 6
046	Orchestral Harp	113	Agogo	180	Honky Tonk 5	247	Xylophone 5	314	Harmonica 1
047	Timpani	114	Steel Drums	181	Honky Tonk 6	248	Xylophone 6	315	Harmonica 2
048	String Ensemble 1	115	Wood Block	182	Electric Piano 1	249	Tubular Bell	316	Harmonica 3
049	String Ensemble 2	116	Taiko Drum	183	Electric Piano 2	250	Church Bell	317	Harmonica 4
050	Synth Strings 1	117	Melodic Drum	184	Electric Piano 3	251	Carillon	318	Harmonica 5
051	Synth Strings 2	118	Synth Drum	185	Electric Piano 4	252	Dulcimer 1	319	Harmonica 6
052	Choir Aahs	119	Reverse Cymbal	186	Electric Piano 5	253	Dulcimer 2	320	Tango Accordion 1
053	Voice Oohs	120	Guitar Fret Noise	187	Electric Piano 6	254	Dulcimer 3	321	Tango Accordion 2
054	Synth Voice	121	Breath Noise	188	Electric Piano 7	255	Dulcimer 4	322	Tango Accordion 3
055	Orchestral	122	Seashore	189	Electric Piano 8	256	Dulcimer 5	323	Tango Accordion 4
056	Trumpet	123	Bird Tweet	190	Electric Piano 9	257	Dulcimer 6	324	Tango Accordion 5
057	Trombone	124	Telephone Ring	191	Electric Piano 10	258	Dulcimer 7	325	Tango Accordion 6
058	Tuba	125	Helicopter	192	Electric Piano 11	259	Drawbar Organ 1	326	Acoustic Nylon Guitar 1
059	Muted Trumpet	126	Applause	193	Electric Piano 12	260	Drawbar Organ 2	327	Acoustic Nylon Guitar 2
060	French Horn	127	Gun Shot	194	Electric Piano 13	261	Drawbar Organ 3	328	Acoustic Nylon Guitar 3
061	Brass Section	128	Yun Luo	195	Electric Piano 14	262	Drawbar Organ 4	329	Acoustic Nylon Guitar 4
062	Synth Brass 1	129	Gan Mei Lang	196	Electric Piano 15	263	Drawbar Organ 5	330	Acoustic Nylon Guitar 5
063	Synth Brass 2	130	Bian Mang	197	Electric Piano 16	264	Drawbar Organ 6	331	Acoustic Nylon Guitar 6
064	Soprano Sax	131	Pai Gu	198	Electric Piano 17	265	Drawbar Organ 7	332	Acoustic Nylon Guitar 7
065	Alto Sax	132	Bian Qin	199	Electric Piano 18	266	Drawbar Organ 8	333	Acoustic Nylon Guitar 8
066	Tenor Sax	133	Bian Zhong	200	Electric Piano 19	267	Drawbar Organ 9	334	Acoustic Nylon Guitar 9

보이스 리스트 [Voice List]

No.	Name	No.	Name	No.	Name	No.	Name	No.	Name
335	Ukulele	402	Slap Bass 4	469	String Ensemble 1	536	Synth Brass 11	603	Pad-Halo
336	Acoustic Steel Guitar 1	403	Slap Bass 5	470	String Ensemble 2	537	Synth Brass 12	604	Pad-Sweep
337	Acoustic Steel Guitar 2	404	Slap Bass 6	471	String Ensemble 3	538	Synth Brass 13	605	FX-Rain
338	Acoustic Steel Guitar 3	405	Slap Bass 7	472	String Ensemble 4	539	Synth Brass 14	606	FX-Soundtrack
339	Acoustic Steel Guitar 4	406	Slap Bass 8	473	String Ensemble 5	540	Soprano Sax 1	607	FX-Crystal
340	Acoustic Steel Guitar 5	407	Synth Bass 1	474	String Ensemble 6	541	Soprano Sax 2	608	FX-Atmosphere
341	Acoustic Steel Guitar 6	408	Synth Bass 2	475	String Ensemble 7	542	Alto Sax 1	609	FX-Brightness
342	Acoustic Steel Guitar 7	409	Synth Bass 3	476	String Ensemble 8	543	Alto Sax 2	610	FX-Goblins
343	Acoustic Steel Guitar 8	410	Synth Bass 4	477	String Ensemble 9	544	Alto Sax 3	611	FX-Echo 1
344	Acoustic Steel Guitar 9	411	Synth Bass 5	478	String Ensemble 10	545	Alto Sax 4	612	FX-Echo 2
345	12 String Guitar 1	412	Synth Bass 6	479	String Ensemble 11	546	Alto Sax 5	613	FX-Sci-Fi
346	12 String Guitar 2	413	Synth Bass 7	480	String Ensemble 12	547	Alto Sax 6	614	Sitar
347	Nylon+String Guitar	414	Synth Bass 8	481	String Ensemble 13	548	Alto Sax 7	615	Banjo
348	Mandolin	415	Synth Bass 9	482	Synth Strings 1	549	Alto Sax 8	616	Shamisen 1
349	Electric Jazz Guitar 1	416	Synth Bass 10	483	Synth Strings 2	550	Alto Sax 9	617	Shamisen 2
350	Electric Jazz Guitar 2	417	Synth Bass 11	484	Synth Strings 3	551	Tenor Sax 1	618	Shamisen 3
351	Electric Jazz Guitar 3	418	Synth Bass 12	485	Synth Strings 4	552	Tenor Sax 2	619	Shamisen 4
352	Electric Jazz Guitar 4	419	Synth Bass 13	486	Synth Strings 5	553	Baritone Sax 1	620	Shamisen 5
353	Electric Jazz Guitar 5	420	Synth Bass 14	487	Synth Strings 6	554	Baritone Sax 2	621	Shamisen 6
354	Electric Jazz Guitar 6	421	Synth Bass 15	488	Synth Strings 7	555	Oboe	622	Koto 1
355	Hawaiian Guitar	422	Synth Bass 16	489	Synth Strings 8	556	English Horns 1	623	Koto 2
356	Electric Clean Guitar 1	423	Synth Bass 17	490	Synth Strings 9	557	English Horns 2	624	Koto 3
357	Electric Clean Guitar 2	424	Synth Bass 18	491	Synth Strings 10	558	Bassoon 1	625	Koto 4
358	Electric Clean Guitar 3	425	Synth Bass 19	492	Synth Strings 11	559	Bassoon 2	626	Koto 5
359	Electric Clean Guitar 4	426	Synth Bass 20	493	Choir Aahs	560	Clarinet 1	627	Koto 6
360	Electric Clean Guitar 5	427	Synth Bass 21	494	Voice Oohs	561	Clarinet 2	628	Koto 7
361	Electric Clean Guitar 6	428	Synth Bass 22	495	Synth Voice	562	Piccolo 1	629	Kalimba
362	Electric Clean Guitar 7	429	Synth Bass 23	496	Orchestra Hit 1	563	Piccolo 2	630	Bagpipes
363	Chorus Guitar 1	430	Synth Bass 24	497	Orchestra Hit 2	564	Piccolo 3	631	Fiddle
364	Chorus Guitar 2	431	Synth Bass 25	498	Orchestra Hit 3	565	Piccolo 4	632	Shanai
365	Electric Muted Guitar 1	432	Synth Bass 26	499	Trumpet 1	566	Piccolo 5	633	Tinkle Bell
366	Electric Muted Guitar 2	433	Synth Bass 27	500	Trumpet 2	567	Piccolo 6	634	Agogo
367	Electric Muted Guitar 3	434	Synth Bass 28	501	Trumpet 3	568	Flute	635	Steel Drum
368	Electric Muted Guitar 4	435	Synth Bass 29	502	Trumpet 4	569	Recorder	636	Triangle
369	Electric Muted Guitar 5	436	Synth Bass 30	503	Trumpet 5	570	Pan Flute	637	Wood Block
370	Electric Muted Guitar 6	437	Synth Bass 31	504	Trumpet 6	571	Bottle Blow	638	Castanet
371	Funky Guitar	438	Synth Bass 32	505	Trumpet 7	572	Shakuhachi	639	Taiko Drum
372	Overdriven Guitar 1	439	Synth Bass 33	506	Trumpet 8	573	Whistle	640	Concert Bass Drum
373	Overdriven Guitar 2	440	Synth Bass 34	507	Trumpet 9	574	Ocarina	641	Melodic Drum 1
374	Distortion Guitar	441	Synth Bass 35	508	Trumpet 10	575	Lead-Square Wave 1	642	Melodic Drum 2
375	Feedback Guitar	442	Synth Bass 36	509	Trumpet 11	576	Lead-Square Wave 2	643	Synth Drum
376	Guitar Harmonics 1	443	Synth Bass 37	510	Trumpet 12	577	Lead-Square Wave 3	644	T808 Tom
377	Guitar Harmonics 2	444	Synth Bass 38	511	Trumpet 13	578	Lead-Square Wave 4	645	Electronic Drum
378	Guitar Feedback	445	Synth Bass 39	512	Trombone	579	Lead-Square Wave 5	646	Reverse Cymbal
379	Acoustic Bass	446	Synth Bass 40	513	Tuba	580	Lead-Square Wave 6	647	Guitar Fret Noise
380	Electric Fingered Bass 1	447	Synth Bass 41	514	Muted Trumpet 1	581	Lead-Square Wave 7	648	Guitar Cut
381	Electric Fingered Bass 2	448	Synth Bass 42	515	Muted Trumpet 2	582	Lead-Sine Wave	649	Guitar Slap
382	Electric Fingered Bass 3	449	Synth Bass 43	516	Muted Trumpet 3	583	Lead-Sawtooth Wave 1	650	Bass Slide
383	Electric Fingered Bass 4	450	Synth Bass 44	517	Muted Trumpet 4	584	Lead-Sawtooth Wave 2	651	Pick Scrape
384	Electric Fingered Bass 5	451	Synth Bass 45	518	Muted Trumpet 5	585	Lead-Calliope 1	652	Breath Noise
385	Electric Fingered Bass 6	452	Synth Bass 46	519	Muted Trumpet 6	586	Lead-Calliope 2	653	Flute Key Click
386	Electric Fingered Bass 7	453	Synth Bass 47	520	Muted Trumpet 7	587	Lead-Calliope 3	654	Seashore
387	Electric Fingered Bass 8	454	Synth Bass 48	521	Muted Trumpet 8	588	Lead-Calliope 4	655	Rain
388	Electric Fingered Bass 9	455	Synth Bass 49	522	French Horn	589	Lead-Calliope 5	656	Thunder
389	Electric Picked Bass 1	456	Violin	523	Brass Section 1	590	Lead-Calliope 6	657	Wind
390	Electric Picked Bass 2	457	Viola	524	Brass Section 2	591	Lead-Chiff	658	Stream
391	Electric Picked Bass 3	458	Cello	525	Brass Section 3	592	Lead-Charang	659	Bubble
392	Electric Picked Bass 4	459	Contrabass	526	Synth Brass 1	593	Lead-Voice	660	Bird 1
393	Electric Picked Bass 5	460	Tremolo Strings	527	Synth Brass 2	594	Lead-Fifths	661	Bird 2
394	Electric Picked Bass 6	461	Pizzicato Strings	528	Synth Brass 3	595	Lead-Bass	662	Dog
395	Electric Picked Bass 7	462	Orchestral Harp 1	529	Synth Brass 4	596	Pad-New Age	663	Horse Gallop
396	Electric Picked Bass 8	463	Orchestral Harp 2	530	Synth Brass 5	597	Pad-Warm	664	Telephone 1
397	Electric Picked Bass 9	464	Orchestral Harp 3	531	Synth Brass 6	598	Pad-String	665	Telephone 2
398	Fretless Bass	465	Orchestral Harp 4	532	Synth Brass 7	599	Pad-Polysynth	666	Door Creaking
399	Slap Bass 1	466	Orchestral Harp 5	533	Synth Brass 8	600	Pad-Choir	667	Door Closing
400	Slap Bass 2	467	Orchestral Harp 6	534	Synth Brass 9	601	Pad-Bowed	668	Scratch
401	Slap Bass 3	468	Timpani	535	Synth Brass 10	602	Pad-Metallic	669	Wind Chime

보이스 리스트 [Voice List]

No.	Name	No.	Name	No.	Name	No.	Name	No.	Name
670	Helicopter	736	Nylon Guitar 7	802	Tango Accordion 3	868	Orchestral Harp 9	934	Synth Bass 15
671	Car Start	737	Nylon Guitar 8	803	Tango Accordion 4	869	Orchestral Harp 10	935	Synth Bass 16
672	Car Stop	738	Nylon Guitar 9	804	Tango Accordion 5	870	Xylophone 1	936	Synth Bass 17
673	Car Pass	739	Nylon Guitar 10	805	Tango Accordion 6	871	Xylophone 2	937	Synth Bass 18
674	Car Crash	740	Steel Guitar 1	806	Tango Accordion 7	872	Xylophone 3	938	Synth Bass 19
675	Siren	741	Steel Guitar 2	807	Tango Accordion 8	873	Xylophone 4	939	Synth Bass 20
676	Train	742	Steel Guitar 3	808	Tango Accordion 9	874	Xylophone 5	940	Trumpet 1
677	Jet Plane	743	Steel Guitar 4	809	Tango Accordion 10	875	Xylophone 6	941	Trumpet 2
678	Star Ship	744	Steel Guitar 5	810	Harpsichord 1	876	Xylophone 7	942	Trumpet 3
679	Burst Noise	745	Steel Guitar 6	811	Harpsichord 2	877	Xylophone 8	943	Trumpet 4
680	Applause	746	Steel Guitar 7	812	Harpsichord 3	878	Xylophone 9	944	Trumpet 5
681	Laughing	747	Steel Guitar 8	813	Harpsichord 4	879	Xylophone 10	945	Trumpet 6
682	Screaming	748	Steel Guitar 9	814	Harpsichord 5	880	Dulcimer 1	946	Trumpet 7
683	Punch	749	Steel Guitar 10	815	Harpsichord 6	881	Dulcimer 2	947	Trumpet 8
684	Heart Beat	750	Jazz Guitar 1	816	Harpsichord 7	882	Dulcimer 3	948	Trumpet 9
685	Footstep	751	Jazz Guitar 2	817	Harpsichord 8	883	Dulcimer 4	949	Trumpet 10
686	Gun Shot	752	Jazz Guitar 3	818	Harpsichord 9	884	Dulcimer 5	950	Muted Trumpet 1
687	Machine Gun	753	Jazz Guitar 4	819	Harpsichord 10	885	Dulcimer 6	951	Muted Trumpet 2
688	Laser Gun	754	Jazz Guitar 5	820	Clavi 1	886	Dulcimer 7	952	Muted Trumpet 3
689	Explosion	755	Jazz Guitar 6	821	Clavi 2	887	Dulcimer 8	953	Muted Trumpet 4
690	Piano 1	756	Jazz Guitar 7	822	Clavi 3	888	Dulcimer 9	954	Muted Trumpet 5
691	Piano 2	757	Jazz Guitar 8	823	Clavi 4	889	Dulcimer 10	955	Muted Trumpet 6
692	Piano 3	758	Jazz Guitar 9	824	Clavi 5	890	Fingered Bass 1	956	Muted Trumpet 7
693	Piano 4	759	Jazz Guitar 10	825	Clavi 6	891	Fingered Bass 2	957	Muted Trumpet 8
694	Piano 5	760	Clean Guitar 1	826	Clavi 7	892	Fingered Bass 3	958	Muted Trumpet 9
695	Piano 6	761	Clean Guitar 2	827	Clavi 8	893	Fingered Bass 4	959	Muted Trumpet 10
696	Piano 7	762	Clean Guitar 3	828	Clavi 9	894	Fingered Bass 5	960	Muted Guitar 1
697	Piano 8	763	Clean Guitar 4	829	Clavi 10	895	Fingered Bass 6	961	Muted Guitar 2
698	Piano 9	764	Clean Guitar 5	830	Celesta 1	896	Fingered Bass 7	962	Muted Guitar 3
699	Piano 10	765	Clean Guitar 6	831	Celesta 2	897	Fingered Bass 8	963	Muted Guitar 4
700	Honky Tonk 1	766	Clean Guitar 7	832	Celesta 3	898	Fingered Bass 9	964	Muted Guitar 5
701	Honky Tonk 2	767	Clean Guitar 8	833	Celesta 4	899	Fingered Bass 10	965	Muted Guitar 6
702	Honky Tonk 3	768	Clean Guitar 9	834	Celesta 5	900	Picked Bass 1	966	Muted Guitar 7
703	Honky Tonk 4	769	Clean Guitar 10	835	Celesta 6	901	Picked Bass 2	967	Muted Guitar 8
704	Honky Tonk 5	770	Reed Organ 1	836	Celesta 7	902	Picked Bass 3	968	Muted Guitar 9
705	Honky Tonk 6	771	Reed Organ 2	837	Celesta 8	903	Picked Bass 4	969	Muted Guitar 10
706	Honky Tonk 7	772	Reed Organ 3	838	Celesta 9	904	Picked Bass 5	970	Piccolo 1
707	Honky Tonk 8	773	Reed Organ 4	839	Celesta 10	905	Picked Bass 6	971	Piccolo 2
708	Honky Tonk 9	774	Reed Organ 5	840	Shamisen 1	906	Picked Bass 7	972	Piccolo 3
709	Honky Tonk 10	775	Reed Organ 6	841	Shamisen 2	907	Picked Bass 8	973	Piccolo 4
710	Electric Piano 1	776	Reed Organ 7	842	Shamisen 3	908	Picked Bass 9	974	Piccolo 5
711	Electric Piano 2	777	Reed Organ 8	843	Shamisen 4	909	Picked Bass 10	975	Piccolo 6
712	Electric Piano 3	778	Reed Organ 9	844	Shamisen 5	910	Slap Bass 1	976	Piccolo 7
713	Electric Piano 4	779	Reed Organ 10	845	Shamisen 6	911	Slap Bass 2	977	Piccolo 8
714	Electric Piano 5	780	Accordion 1	846	Shamisen 7	912	Slap Bass 3	978	Piccolo 9
715	Electric Piano 6	781	Accordion 2	847	Shamisen 8	913	Slap Bass 4	979	Piccolo 10
716	Electric Piano 7	782	Accordion 3	848	Shamisen 9	914	Slap Bass 5	980	Sax 1
717	Electric Piano 8	783	Accordion 4	849	Shamisen 10	915	Slap Bass 6	981	Sax 2
718	Electric Piano 9	784	Accordion 5	850	Koto 1	916	Slap Bass 7	982	Sax 3
719	Electric Piano 10	785	Accordion 6	851	Koto 2	917	Slap Bass 8	983	Sax 4
720	Electric Piano 11	786	Accordion 7	852	Koto 3	918	Slap Bass 9	984	Sax 5
721	Electric Piano 12	787	Accordion 8	853	Koto 4	919	Slap Bass 10	985	Sax 6
722	Electric Piano 13	788	Accordion 9	854	Koto 5	920	Synth Bass 1	986	Sax 7
723	Electric Piano 14	789	Accordion 10	855	Koto 6	921	Synth Bass 2	987	Sax 8
724	Electric Piano 15	790	Harmonica 1	856	Koto 7	922	Synth Bass 3	988	Sax 9
725	Electric Piano 16	791	Harmonica 2	857	Koto 8	923	Synth Bass 4	989	Sax 10
726	Electric Piano 17	792	Harmonica 3	858	Koto 9	924	Synth Bass 5	990	Standard Kit
727	Electric Piano 18	793	Harmonica 4	859	Koto 10	925	Synth Bass 6	991	Chinese Kit
728	Electric Piano 19	794	Harmonica 5	860	Orchestral Harp 1	926	Synth Bass 7	992	Room Kit
729	Electric Piano 20	795	Harmonica 6	861	Orchestral Harp 2	927	Synth Bass 8	993	Power Kit
730	Nylon Guitar 1	796	Harmonica 7	862	Orchestral Harp 3	928	Synth Bass 9	994	Electronic Kit
731	Nylon Guitar 2	797	Harmonica 8	863	Orchestral Harp 4	929	Synth Bass 10	995	T808 Kit
732	Nylon Guitar 3	798	Harmonica 9	864	Orchestral Harp 5	930	Synth Bass 11	996	Jazz Kit
733	Nylon Guitar 4	799	Harmonica 10	865	Orchestral Harp 6	931	Synth Bass 12	997	Brush Kit
734	Nylon Guitar 5	800	Tango Accordion 1	866	Orchestral Harp 7	932	Synth Bass 13	998	Orchestra Kit
735	Nylon Guitar 6	801	Tango Accordion 2	867	Orchestral Harp 8	933	Synth Bass 14	999	SFX Kit

리듬 리스트 [Rhythm List]

No.	Name	No.	Name	No.	Name	No.	Name	No.	Name
	8Beat	042	Pop Waltz	086	Twist	126	Dance 1	166	Reggae
000	8Beat 1	043	Pop Dance		Ballad	127	Dance 2		Latin
001	8Beat 2	044	Motown	087	Ballad 1	128	Disco	167	Cha Cha
002	8Beat 3	045	British Pop 1	088	Ballad 2	129	House	168	Rumba
003	8Beat 4	046	British Pop 2	089	Ballad 3	130	Euro Beat	169	Samba
004	8Beat 5	047	British Pop 3	090	Ballad 4	131	Funky Dance	170	BossaNova
005	8Beat 6	048	Guitar Pop	091	Ballad 5	132	80's Dance	171	Mambo
006	8Beat 7	049	Slow Pop	092	Soul Ballad	133	Techno	172	Salsa
007	8Beat 8	050	50's Pop	093	6/8 Ballad	134	Macarena	173	Beguine
008	8Beat 9	051	80's Pop	094	Acoustic Ballad	135	Rave	174	Cumbia
009	8Beat 10		Rock	095	Colour Ballad	136	Fusion	175	Latin
010	8Beat 11	052	Rock 1	096	Guitar Ballad		R&B		World
011	8Beat 12	053	Rock 2	097	Piano Ballad	137	Blues 1	176	Baroque
012	8Beat 13	054	Rock 3	098	Organ Ballad	138	Blues 2	177	Bolero
013	8Beat 14	055	Rock 4		Groove	139	Blues 3	178	Holly Wood
014	8Beat 15	056	50's Rock	099	Groove 1	140	Funky 1		Ballroom
015	8Beat 16	057	60's Rock 1	100	Groove 2	141	Funky 2	179	Foxtrot
016	8Beat 17	058	60's Rock 2	101	Groove 3	142	Funky 3	180	Paso Doble
017	8Beat 18	059	70's Rock	102	Groove 4	143	Gospel	181	Quick Step
	16Beat	060	80's Rock	103	Groove 5	144	Rap 1	182	Bachata
018	16Beat 1	061	Big Rock	104	Groove 6	145	Rap 2	183	Boston
019	16Beat 2	062	Power Rock	105	Groove 7	146	Soul 1	184	Tango
020	16Beat 3	063	Dark Rock	106	Groove 8	147	Soul 2		Waltz
021	16Beat 4	064	Jazz Rock	107	Groove 9	148	Soul 3	185	Waltz
022	16Beat 5	065	Soft Rock		Piano	149	Soul 4		Traditional
023	16Beat 6	066	Pop Rock 1	108	Piano 1		Country	186	March
024	16Beat 7	067	Pop Rock 2	109	Piano 2	150	Country 1	187	Polka
025	16Beat 8	068	Funky Rock 1	110	Piano 3	151	Country 2		Classical
	Pop	069	Funky Rock 2	111	Piano 4	152	Country 3	188	Classical 1
026	Pop 1	070	Ballad Rock	112	Piano 5	153	Country 4	189	Classical 2
027	Pop 2	071	Folk Rock	113	Piano 6	154	Country 5		Chinese
028	Pop 3	072	Slow Rock 1	114	Piano 7		Jazz	190	China Folk
029	Pop 4	073	Slow Rock 2	115	Piano 8	155	Jazz 1	191	China Ballad
030	Pop 5	074	Slow Rock 3	116	Piano 9	156	Jazz 2	192	China Pop
031	Pop 6	075	Slow Rock 4	117	Piano 10	157	Jazz Waltz	193	Xin Jiang
032	Pop 7	076	Rock&Roll 1		Unplugged	158	Jazz Ballad	194	Shan Bei
033	Pop 8	077	Rock&Roll 2	118	Unplugged 1	159	Lounge	195	Yun Nan
034	Pop 9	078	Rock&Roll 3	119	Unplugged 2	160	Jive	196	GuangDong
035	Pop 10	079	Shuffle 1	120	Unplugged 3	161	Ragtime	197	Xi Zang
036	Pop 11	080	Shuffle 2	121	Unplugged 4	162	Charlston	198	Mongolian
037	Pop 12	081	Shuffle 3	122	Unplugged 5	163	Big Band	199	Korean
038	Pop 13	082	Boogie 1	123	Unplugged 6		Swing		
039	Pop 14	083	Boogie 2	124	Unplugged 7	164	Swing		
040	Pop Bolero	084	Boogie 3	125	Unplugged 8		Caribbean		
041	Pop BossaNova	085	Boogie 4		Dance	165	Caribbean		

데모송 / 교육기능 리스트 [Demo List]

No.	Rhythm name	No.	Rhythm name
000	Mozart Turkish March	013	Schubert Three Military Marches
001	Mozart Sonate	014	Schumann Traumerei
002	Chopin Fantasie Impromptu	015	Haydn Little Serenade
003	Chopin Nocturne	016	Pachelbel Canon In D
004	Chopin Petit Chien	017	Badarzewska Maiden's Prayer
005	Beethoven Patheic Sonata	018	Liszt Liebestrome
006	Beethoven For Elise	019	Tchaikovsky Barcarolle
007	Beethoven Mondschein Sonate	020~125	Beyer
008	Bach Waltz In A Mino	126~225	Czerny 100
009	Bach Menuett	226~255	Czerny 30
010	Richard Souvenirs D'enfance	256~295	Czerny 40
011	Richard Ballade Pour Adeline	296~340	Sonatine
012	Mendelssohn Fruhlingslied	341~365	Burgmuller

제품 사양

디스플레이	1.3인치 LED
건반	SHA-I(Samick Hammer Action-Ivory) 해머 액션 건반
동시발음	256
음색 수	1,000
리듬	200
음원	SGSE V2 (Seiler Grand Sound Engine Ver.2)
샘플링	DMLS(Dynamic Multi Layered Sampling)
단자	AUDIO IN / OUT, MIDI IN / OUT, USB MIDI
주요기능	메트로놈 / 조옮김 / 음색혼합 / 건반분리 / 리버브 / 코러스

제품 보증서

제 품 명	디지털피아노	모 델 명	
구 입 일	년 월 일	SERIAL NO.	
구입대리점		품질보증기간	1년

- 무상보증 기간은 구입일로부터 산정되므로 구입일자를 기재 받으시기 바랍니다.
- 구입일자 확인이 안 될 경우 제조일로부터 3개월이 경과한 날로부터 품질보증 기간을 산정합니다.
- 이 보증서는 대한민국에서만 사용되며 재발행 되지 않으므로 사용설명서와 함께 잘 보관하십시오.

소비자 피해보상 안내

소비자 피해 유형		보상 내용		
		보증기간 이내	보증기간 이후	
정상적인 사용 상태에서의 성능/기능상 하자로 고장 발생시	구입 후 10일 이내에 중요한 수리를 요할 때	제품 교환 또는 구입가 환급	해당 없음	
	구입 후 1개월 이내에 중요한 수리를 요할 때	제품 교환		
	제품 운송 과정 및 제품 설치 중 발생한 주요 피해			
	교환한 제품이 1개월 이내에 중요한 수리를 요할 때	제품 교환 또는 구입가 환급		
	교환 불가능 시			
	수리가능	동일한 하자로 3회 고장 발생 시	무상 수리	유상 수리
		동일한 하자로 4회 고장 발생 시	제품 교환 또는 구입가 환급	유상 수리
		동일한 하자로 5회 고장 발생 시		유상 수리
소비자가 수리 의뢰한 제품을 사업자가 분실한 경우	제품 교환 또는 구입가 환급	감가상각 정액에 10%를 가산하여 환급		
부품 보유기간 이내 수리용 부품을 보유하고 있지 않아 수리가 불가능한 경우				
수리용 부품이 있으나 수리 불가능 시			정액 감각상각 후 환급	
소비자의 고의 과실로 인한 고장인 경우	수리가 불가능한 경우	유상 수리에 해당하는 금액 징수 후 제품 교환	유상 수리 금액 징수 후 감각상각 적용 제품 교환	
	수리가 가능한 경우	유상 수리	유상 수리	

- 당사에서는 재정경제부 고시 품목별 소비자 피해 보상 규정에 따라 위와 같이 제품에 대한 보증을 실시합니다.
- 보상 여부 및 내용 통보는 요구일로부터 7일 이내에, 피해 보상은 통보일로부터 14일 이내에 해결해 드립니다.
- 서비스 요청 시 당사의 서비스센터 또는 지정된 협력사에서 서비스를 합니다. (삼익악기 고객센터 1688-3151 > 고객센터 1번 > 디지털피아노1번)
- 가정용 제품을 상업용도(영업장소)로 사용하는 경우 보증기간을 6개월로 단축 적용합니다.
- 사용 방법의 설명, 제품의 세척과 관련된 사항은 피해보상 대상의 하자가 아닙니다.
- 피아노 의자 및 헤드폰은 서비스 품목으로서, AS 대상 품목이 아닙니다.
- 주요부품 보유연한 : 5년

